

5-16 ACPM



ACPM is an attendant control panel with modern shape designed, the streamlined outline is not only for better look but easily for user handling and operating, it is also can be fixed on hospital beds.

Features :

There are 2 main purposes for ACPM

(1) ACPM3/ACPM4 for hospital bed or care bed:

- Work with CB20, control Max. 4 actuators
- Able to control 1 set of LED light
- Can be used as an additional handset
- Protection class: IP51
- Color: Gray white
- With CPR function to make bed flat and down to lowest position.
- Work with HB5XA or HB9XA[must also work with CB20(NEW)].
- Battery power indicator.

(2).ACPM5/ACPM6 for operation table :


- Work with CB24, control Max. 6 actuators
- 5 functions can be locked or unlocked individually.
- Function to lock or unlock all actuators.
- Return function for medical staff use and calibration function for installation staff use.
- 3 sets of memory
- Can be used as an additional handset
- Castor lock function (only on ACPM6)
- Protection class: IP51
- Color: Gray white
- Can work with HB1XT handset
- Battery power indicator.

Options :

- Coiled cable length can be customized.
- Functions can be customized according to customer's requests. (Min. order quantity: 1000pcs, customer designs the sticker)


ACPM Ordering Sample :

 ACPM 3 - C

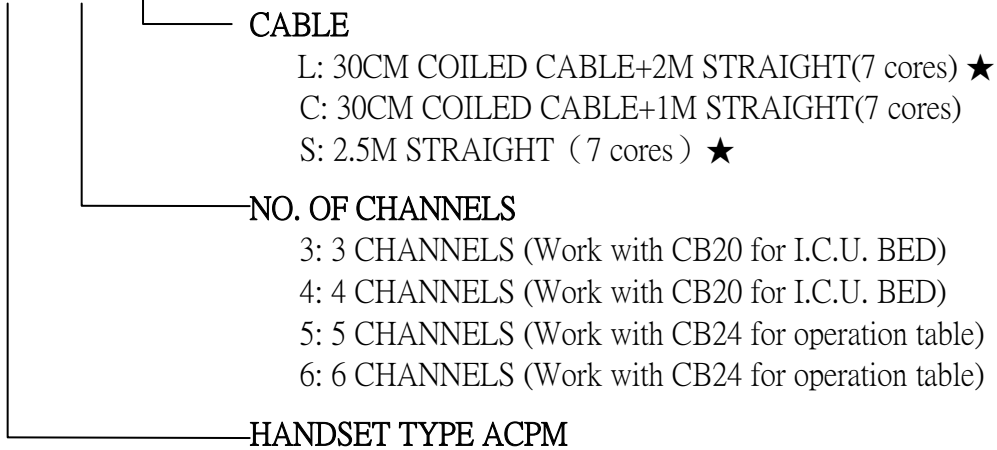


The 「★」 signal is for special specification.

 STANDARD FRONT COVER :

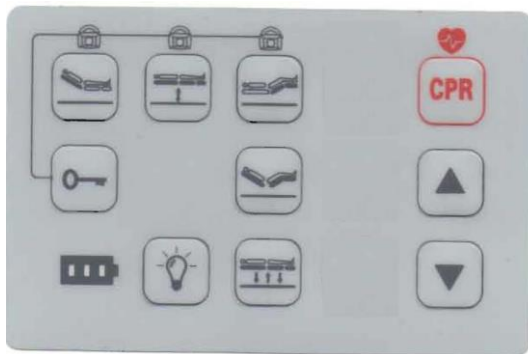

ACPM3

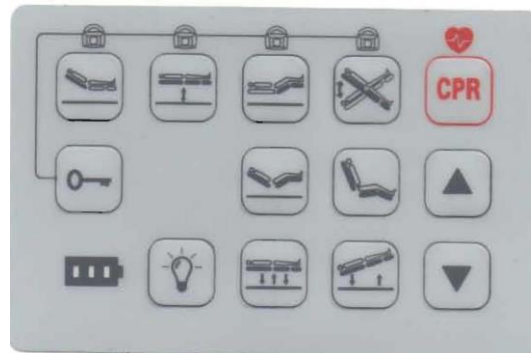 

ACPM4




ACPM5



ACPM6

Specifications are subject to change without prior notice. It is the responsibility for the product users to determine the suitability of LINKAN A/C products for a specific application. LINKAN A/C will be responsible for replacing/ repairing defective products covered by the warranty if promptly returned to the factory. We won't undertake any responsibility except repairing.

 Dimension :

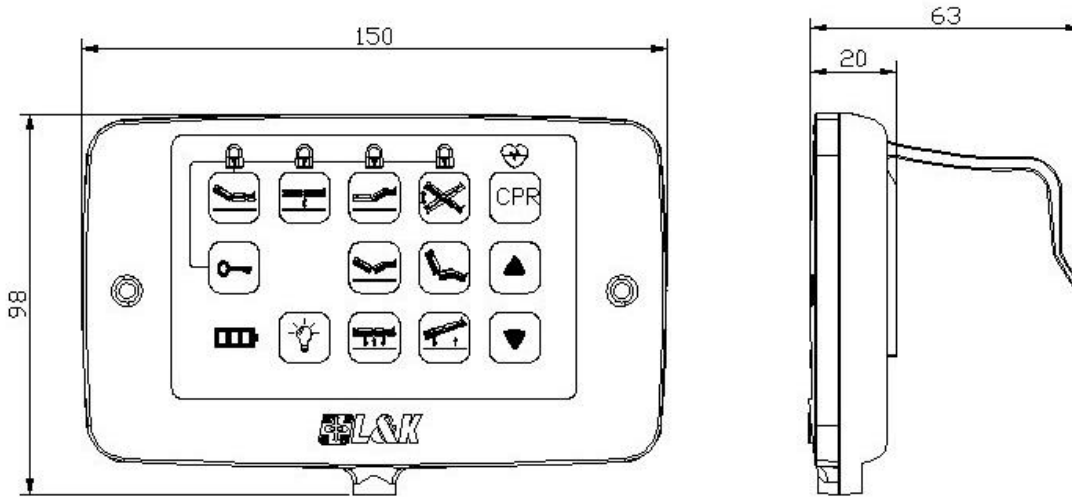

Notice :

- ◆ ACPM3/ACPM4 can only work with CB20 or CB20(NEW); ACPM5/ACPM6 can only work with CB24.
- ◆ The actuators to work with ACPM3/ACPM4 must be with JACK plug; the actuators to work with ACPM5/ACPM6 must have hall sensor and 5pin DIN plug.
- ◆ The actuators to work with ACPM must not be with B (brake).
- ◆ For the detailed manual of ACPM3/ACPM4, please refer to the manual of CB20.
- ◆ For the detailed manual of ACPM5/ACPM6, please refer to the manual of CB24